 


RC-02

 
REMOTE CONTROL USER'S GUIDE

COMPONENTS

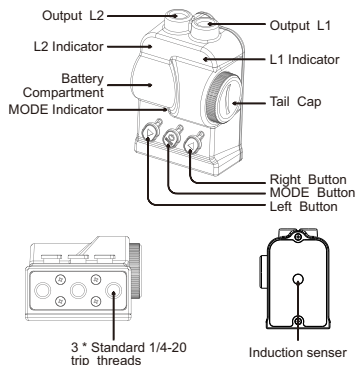

INSTALL BATTERY

- Step 1: Turn the tail cap counter-clockwise to open.
- Step 2: Put the CR123A battery into the battery compartment.
- As shown in the diagram below.
- Step 3: Turn the tail cap clockwise to reattach the battery compartment.

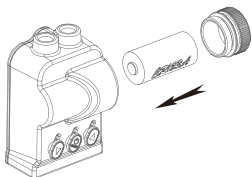

COMPATIBLE MODELS

Remote control RC-02 compatible below X-ADVENTURER light:
M2600-WRUA / M2800-WSRU / M3500-WSRU / M3800-WSRU
M5000-WSRU / M6000-WRBT / M8000-W / M15000 ect.

CONNECT

- Step 1: Connect the remote controller and the video light with the optical fiber cable.
- Step 2: Turn ON the video light.

OPERATING INSTRUCTIONS

MANUAL MODE

Increase the brightness : Press the Right Button
Decrease the brightness : Press the Left Button

Switch MODE: Press the MODE Button for less than one second.

Turn ON/OFF L1: Press the Right Button and MODE Button.
(If L1 Indicator OFF, then the L1 output invalid)

Turn ON/OFF L2: Press the Left Button and MODE Button.
(If L2 Indicator OFF, then the L2 output invalid)

Turn ON/OFF Sleep mode:
Press the MODE Button and hold it for three seconds.
If the video light in Sleep mode, users can only use the remote to wake-up the video light, Or manually turn off and turn on the video light to reset.

AUTO-BRIGHT MODE

Switch Manual mode / Auto-Bright mode:
Press the Left Button and Right Button at the same time

Switch High Auto-Bright / Low Auto-Bright :
Press the Mode Button.
High Auto-Bright: The indicator flashing 1 time per second
Low Auto-Bright: The indicator flashing 2 times per second

GENERAL MAINTAINENCE

If the O-ring is damaged, broken or deformed it should be replaced with the a new O-ring. One spare O-ring is included when you purchase your remotecontroller.

Note: Do not use a sharp tool to remove the O-ring.

WARNINGS

- 1.Do not open the tail cap when using in the water.
- 2.If the remote controller not be used for a long period of time the battery should be removed.

COMMON PROBLEMS & SOLUTIONS

Problem	Solution
Indicator do not light up.	Check the polarity of the battery
	Check the battery level
	Check the battery Tail Cap
Internal leakage	Check the O-rings

SPECIFICATIONS

Battery: 1 x CR123A
Depth Rated: 80m
Weight: 115g on land 40g underwater
Dimension: 68.5(L) x 47.2(W) x 34.8(H)mm
Trip Mount: Standard 1/4-20 trip threads

WARRANTY

We provide a limited warranty to the original purchaser of its products against all defects in original workmanship and material, under normal use and service, for one year from the date of purchase with the following exceptions:

1. Defects attributed to accident, abuse, incorrect use/maintenance and storage.
2. Defects resulting from disassembly or modification by customers or repairers of other companies.
3. Defects attributed to battery leakage.
6. Defects caused by force majeure (such as: earthquakes, fires, floods, etc.)