



M2500-WSRBA Video Light User's Guide

Disclaimer

While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. X-Light reserves the right to change the specifications of the light described herein at any time without prior notice.

Unpacking

The video light is shipped with the items listed below. Please check your package now to confirm that it is complete. Contact your X-Light dealer if anything is missing.


1 x Video Light 1 x YS Mount 1 x Battery 1 x Charger

Precautions

Before you use the Video Light, thoroughly read these precautions to ensure correct use. The precautions described below are for ensuring safe use of the dive light light and for preventing danger and damage to yourself and others. Thoroughly understand the details of these precautions before the rest of this manual.


- Do not look directly into the light beam, otherwise it may cause blindness.
- Do not use the light at water depths exceeding 100 meters.
- Please immediately rinse off the light equipment with fresh water and soak it in fresh water for 20 minutes after every dive.
- The O-rings should be checked to ensure that they are free from any dirt, sand, hair and dust every time before closing the front head because such impurities may cause the light to leak. The O-rings should also be carefully checked for cracks or blemishes. If cracks or blemishes occur, the O-rings should be replaced immediately.

Component

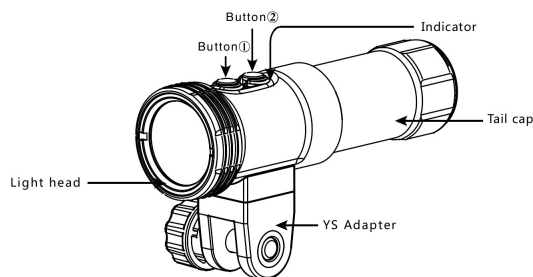

Charge the Battery

1. Use the USB cable connect the Charger and Charger Dock, insert the battery into the charger, the positive electrode (+) of the battery and that of the charger should be on the same direction
 2. The Charger Dock's indicator should turn to red signifying the Charger Dock has received power. When the battery has finished charging, the indicator will turn to green.
- * The Charger is not included. The charger voltage MUST be 5V and current MUST less than 2A. To protect the battery, please do not charge it for more than 12 hours

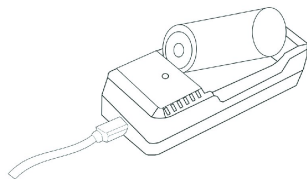

Install the battery

1. Turn the tail cap counter-clockwise to open.
2. Put the Lithium-ion battery into the battery compartment, the battery compartment is located in the body.
3. Turn the tail cap clockwise to close the battery compartment (i.e. reattach the tail to the light head).

Operate the light

Turn ON: Press the buttons ① and ② at the same time and hold it down for 0.5 second.

Turn OFF: Press the buttons ① and ② at the same time and hold it down for more than 0.5 second.

Switch mode

When the light is ON: Press and immediately release the Button ①
Wide Light → Snoot Light → Red Light → Blue Light → Pink Light

Adjust brightness

When the light is ON: Press and immediately release the button ②:
100% → 50% → 25%

Auto-Shut-Off

Auto-Shut-Off Function: Turns the light off for 0.5 second when an external flash is detected.

Press the button ② and hold it down for 2 seconds, The Auto-Shut-Off function will be ON/OFF. Corresponding indicator light flashes (2times/S) when the function is ON.

SOS mode

Turn ON/OFF SOS mode: Press the button ③ and hold it down for more than 2 seconds.

Switch SOS mode: Press and immediately release the button ② :
Snoot light flash → SOS → Flash explosion

Battery Level Indicator

Blue Light: Battery level > 80% Green Light: Battery level > 30%;
Red Light: Battery level is > 10% Flash Red Light: Battery level < 10%.

Attention :

when the battery level indicator is flash red

1. Unable to switch the mode and adjust the brightness;
2. Only 10% brightness output;
3. Auto turn off after 10 minutes later.

Automatic Overheat Protection

When being used at a temperature higher than 50°C, the light will automatically reduce the brightness by 10% to reduce heat and protect the components

Specification

Battery	1 x 26650 Lithium-ion batteries
Brightness	approx. 2500 Lumens
Beam Angle	100 Degree
Burn Time	approx. 60 mins (Wide Light)
LED Life	Over 50 ,000 hours
Depth Rated	100m / 330ft

Standard Warranty

-Light provides a limited warranty to the original purchaser of its products against all defects in original workmanship and material, under normal use and service, for one year from the date of purchase with the following exceptions:

- . Batteries are warranted for 90 days only.
- . Defects attributed to accident, abuse, incorrect use / maintenance and storage.
- . Defects resulting from disassembly or modification by customers or repairers of other companies.
- . Defects attributed to battery leakage.
- . Defects caused by damages of the shell or other external components while usage.
- . The machine label numbers are torn, blurred or counterfeit.
- . Defects caused by force majeure (such as: earthquakes, fires, floods, etc.)